



# Samsung WB2200F Flash Option Button Replacement

If the flash does not go off when a photo is taken, the flash option button may be jammed or broken.

Written By: Rachelle



## INTRODUCTION

Using this repair guide, the user will be able to replace the flash option button on the device.

---



### TOOLS:

- [JIS Driver Set](#) (1)
-

## Step 1 — Battery



- Place the camera upside down on a hard surface such as a table. Make sure that the battery compartment is visible.

## Step 2




- Twist the nob counter-clockwise while pushing cover to the left. Then pull the cover up to reveal the battery.

### Step 3



- Slide the blue tab to the right to release the battery.

### Step 4

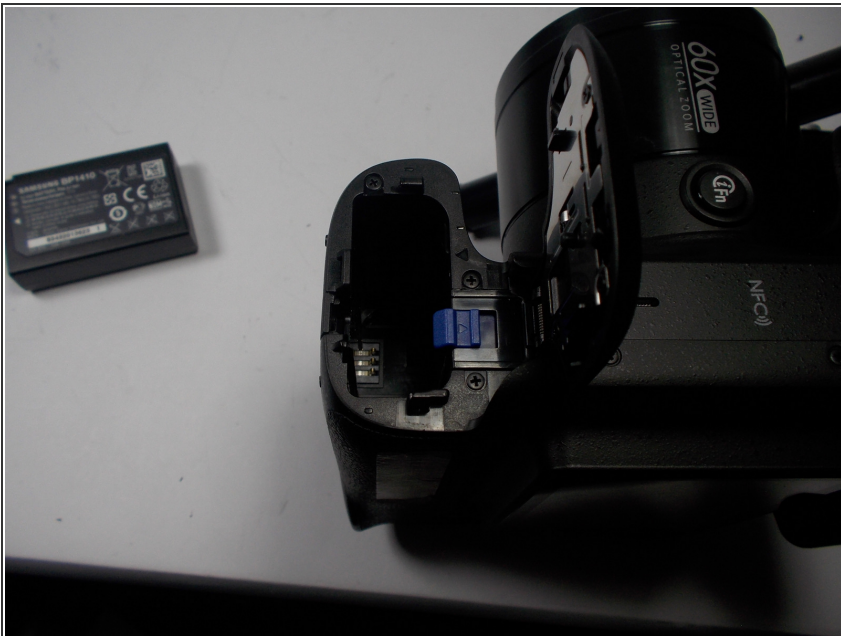

- Carefully slide the battery out of the camera. It can then be replaced with a new battery.




## Step 5 — Face-plate




- Remove the 6mm screws located on the bottom and sides of the camera using the using the screw driver with the JIS size 000 head.

## Step 6

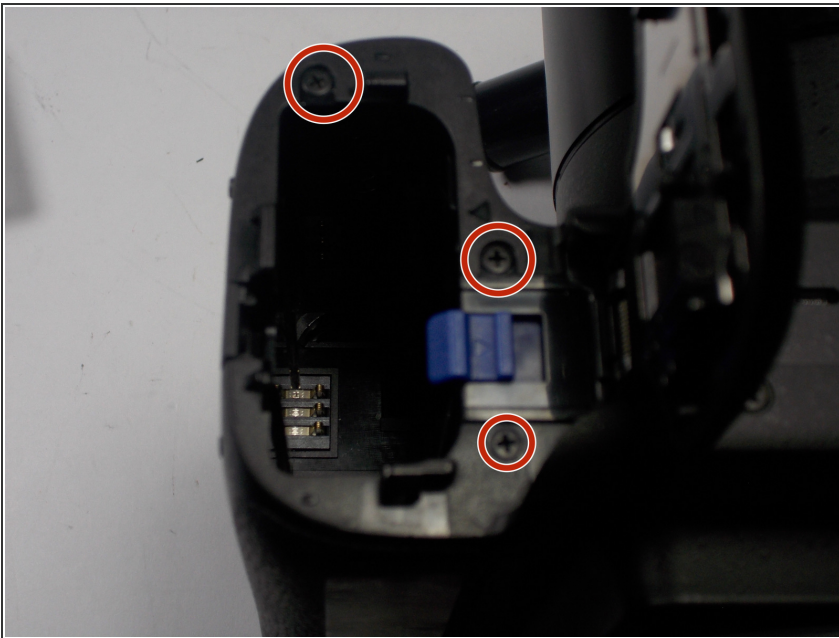


- Remove the two 6mm screws located underneath the battery cover using the same screw driver with the JIS size 000 head.

## Step 7

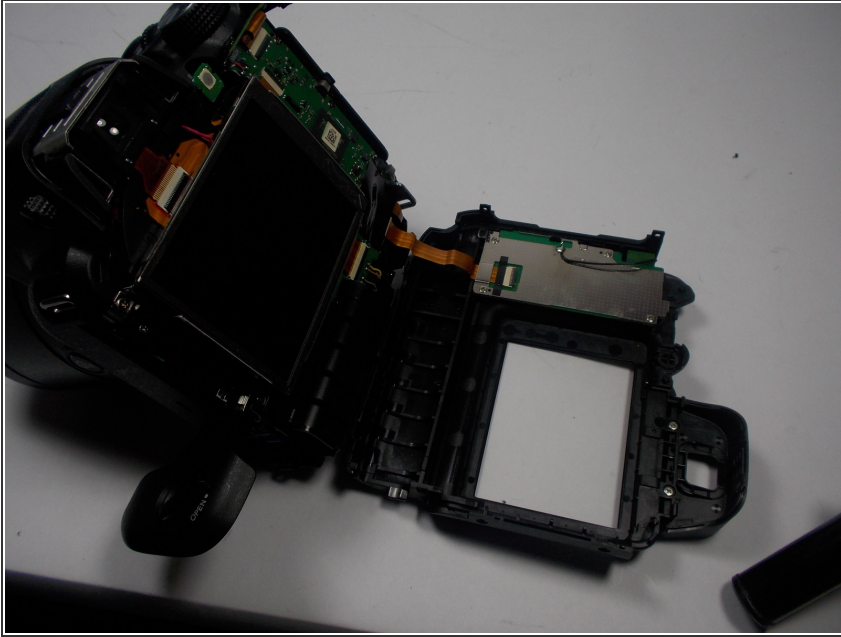

- Carefully pry the face-plate away from the body of the camera, starting from the battery compartment. It should come off without too much trouble, although it may require force.
- ⓘ Make sure to not damage any of the electronic components of the camera

## Step 8 — Flash Option Button

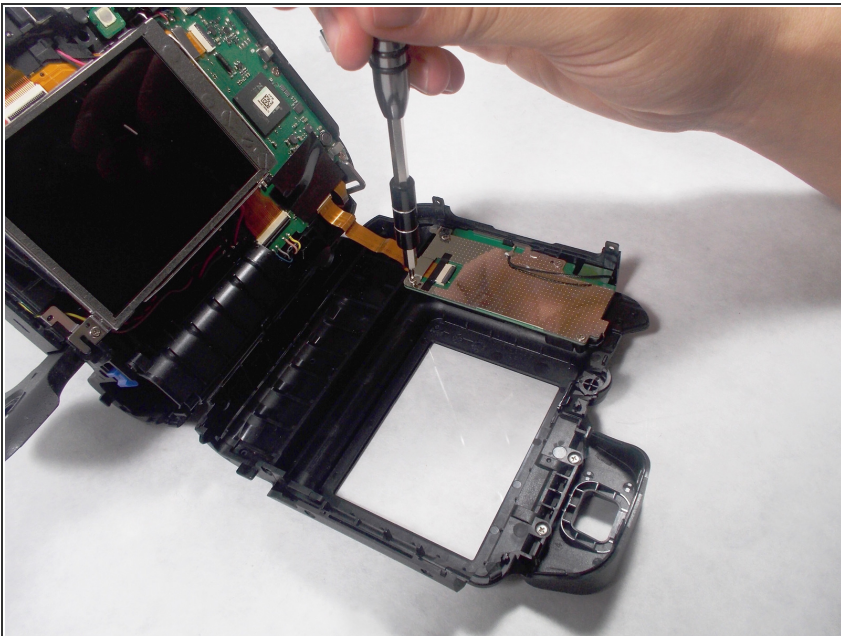

- Looking at the back of the exposed face plate, remove the four 5mm screws, that hold down the metal cover, using the screw driver with the JIS size 000 head.

## Step 9



- Gently lift off the metal cover.

## Step 10



- Clean out any dust or debris from the button interface.
- Replace faulty button.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-12 01:53:14 AM.